














<b>phone connectors (Supplied)</b>	<b>Suitable for</b>
<p>LG Chocolate</p> 	<p><b>All LG Chocolate (KG800) Series Phones</b></p> <p>LG KG800 Chocolate, LG KG810, LG KG320, Shine</p>
<p>iPod®</p> 	<p><b>Dedicated Connector for I-pod, I-pod nano, Iphone</b></p> <p>iPod® nano (1Gb, 2Gb, 4Gb) iPod®(10Gb, 20Gb, 30Gb, 60Gb) iPod® Video (30Gb, 60Gb, 80Gb) iPhone®, iTouch®, iPod® Classic (80Gb, 160Gb)</p>
<p>Nokia® (3.5mm jack)</p> 	<p><b>All older Nokia mobile phone and other devices using the 3.5mm jack.</b></p> <p>1100, 1110, 1221, 1260, 1261, 1600 2260, 2270, 2285, 2300, 2600, 2650, 3100, 3105, 3108, 3120, 3200, 3220, 3230, 3285, 3300, 3350, 3360, 3361, 3390, 3395, 3510, 3510i, 3520, 3530, 3560, 3570, 3585, 3585i, 3586, 3586i, 3588i, 3589i, 3590, 3595, 3600, 3620, 3650, 3660, 5100, 5140, 5140i, 5210, 5510, 6020, 6021, 6030, 6060, 6100, 6108, 6170, 6200, 6220, 6225, 6230, 6230i, 6260, 6310, 6310i, 6340, 6340i, 6360, 6370, 6385, 6510, 6560, 6585, 6590, 6590i, 6600, 6610, 6610i, 6620, 6630, 6650, 6670, 6680, 6681, 6800, 6810, 6820, 6822, 7200, 7210, 7250, 7250i, 7260, 7270, 7280, 7600, 7650, 7700, 7710, 7600, 7610, 7650, 8260, 8265, 8265i, 8270, 8290, 8310, 8390, 8800, 8910, 8910i phones, 9210i Communicator, 9290 Communicator, 9300, 9500 Communicator, N-Gage and N-Gage QD, 2310</p>
<p>Nokia® (2mm jack)</p> 	<p><b>New Nokia Mobile Phones including the N series</b></p> <p>N70, N71, N72, N73, N80, N80ie, N90, N91, N918GB, N92, N93, E61, E62, 770, 2865i, 3155i, 3250, 5500, 6070, 6080, 6101, 6102, 6102i, 6103, 6111, 6125, 6126, 6131, 6133, 6136, 6151, 6155i, 6165i, 6233, 6265i, 6270, 6280, 7360, 7370, 6080, 6300, 7373, 5310, N95, 5610, 6500/slide, N81, N82</p>
<p>Samsung® (wide connector)</p> 	<p><b>Samsung® Wide flat connector</b></p> <p>SCH-A210, SCH-A310, SCH-A399, SCH-A475, SCH-A505, SCH-A509, SCH-A530, SCH-A539, SCH-A563, SCH-A564, SCH-A570, SCH-A591, SCH-A592, SCH-A595, SCH-A599, SCH-A610, SCH-A650, SCH-A670, SCH-A795, SCH-A809, SCH-N181, SCH-N181, SCH-N182, SCH-N191, SCH-N195, SCH-N288, SCH-N330, SCH-N370, SCH-N375, SCH-X199, SCH-X209, SCH-X309, SCH-X319, SCH-X359, SGH-A200, SGH-A288, SGH-A300, SGH-A308, SGH-A400, SGH-A408, SGH-A500, SGH A561, SGH-A608, SGH-A800, SGH-C100, SGH-C130, SGH-C207, SGH-C225, SGH-C417, SGH-D100, SGH-D307, SGH-D347, SGH-D357, SGH-D407, SGH-D415, SGH-D500, SGH-D600, SGH-D800, SGH-E100, SGH-E105, SGH-E300, SGH-E315, SGH-E316, SGH-E317, SGH-E330, SGH-E330N, SGH-E350, SGH-E335, SGH-E370, SGH-E400, SGH-E600, SGH-E630, SGH-E635, SGH-E700, SGH-E710, SGH-E715, SGH-E760, SGH-E770, SGH-E800, SGH-K528, SGH-N200, SGH-N400, SGH-N500,SGH-N620, SGH-N625, SGH-N628, SGH-P107, SGH-P207, SGH-P400, SGH-P408, SGH-P510, SGH-P735, SGH-Q100, SGH-Q200, SGH-Q208, SGH-Q300, SGH-R200, SGH-R208, SGH-R210, SGH-R210S, SGH-R220, SGH-R225, SGH-R225M, SGH-S100, SGH-S200, SGH-S208, SGH-S300, SGH-S300M, SGH-S307, SGH-S308, SGH S500, SGH-T100, SGH-T108, SGH-T200, SGH-T208, SGH-T209, SGH-T309, SGH-T319, SGH-T410, SGH-T400, SGH-T408, SGH-T500, SGH-T609, SGH-T619, SGH-T709, SGH-T719, SGH-V100, SGH-V200, SGH-V205, SGH-V206, SGH-X100, SGH-X105, SGH-X426, SGH-X427, SGH-X427M, SGH-X450, SGH-X460, SGH-X475, SGH-X480, SGH-X495, SGH-X497, SGH-X507, SGH-X600, SGH-X640, SGH-X660, SPH-A420, SPH-A580, SPH-A640, SPH-A900, SPH-M500, SPH-T100</p>
<p>Samsung® (small connector)</p> 	<p><b>Samsung® Small Thin connector</b></p> <p>SGH-D520, D800, D820, D830, D840, D900, E250, E390, E500, E570, E780, E870, E900, P300, P310, X820, X830, Z400, Z400v, Z510, Z520, Z530, Z540, Z540v, Z560, Z720, ZV40, E590, U600, E840, U300, F300</p>

	<p><b>Sony Ericsson® Wide connector</b></p> <p>D750i, J100a, J100c, J100i, J220a, J220c, J220i, J230c, J230i, K310a, K310c, K310i, K320i, K510a, K510c, K510i, K610i, K610im, K750c, K750i, K758c, K790a, K790c, K790i, K800i, M600i, M608c, P990i, V630i, W300c, W300i, W550c, W550i, W600c, W600i, W700c, W700i, W710c, W710i, W800i, W810c, W810i, W830i, W850i, W900c, W900i, W950i, W958c, Z520a, Z520c, Z520i, Z525a, Z525i, Z530c, Z530i, Z550a, Z550c, Z550i, Z558c, Z558i, Z610i, Z710c, Z710i, J220i, K618i, M600i, W800c, W830c T250i, K770i T650i W580i W910i</p>
	<p><b>Universal 4mm straight jack for</b></p> <p><b>Sony PSP®</b> Sony PSP portable games system</p> <p><b>Creative Zen™</b> ZEN, ZEN Touch, ZEN Vision, ZEN Vision:M, MuVo<sup>2</sup>, MuVo<sup>2</sup> FM</p> <p><b>TOM TOM®</b> GO, GO 300, GO 500, GO 510, GO 700, GO 710, GO 910</p> <p><b>Two way radios</b> Allows you to power many Two way radios that charge via a 4mm jack</p> <p><b>Camera's</b> Allows you to power many digital cameras that charge via a 4mm jack</p>
	<p><b>Various phones and devices</b></p> <p><b>Smart Phones (orange)</b> SPV C500, SPV C550, SPV M500, SPV C600, SPV M600 and SPV M3000</p> <p><b>HTC Phones</b> MTeoR, P3300, P3600, P4350, S620, TyTN</p> <p><b>I-Mate Phones</b> JASJAR, SP3, SP3i, SP4m, JAMin, K-Jam and Jam</p> <p><b>O2 XDA Phones</b> XDA Exec, XDA Mini Pro, XDA Mini S, XDA SP, XPhone II and XPhone II m</p> <p><b>T-Mobile Phones</b> MDA Vario, MDA Vario with Co-Pilot, MDA, MDA Pro, MDA Compact II, SDA, SDA Music and Dash</p> <p><b>Motorola®</b> A780, E1070, E770v, KRZR K1, L2, L6, L7 i-mode, MPx200, PEBL V6, RAZR maxx V6, RAZR V3, RAZR V3i, RAZR V3x, RIZR Z3, SLVR L7, U6, V235, V360, V360v</p> <p><b>Qtek Phones</b> 8010, 8020, 9100, 9000, S100, S110 and S200</p> <p><b>Blackberry™</b> 6210, 6220, 6230, 6280, 6510, 7100g, 7100i, 7100r, 7100t, 7100v, 7100x, 7105t, 7130e, 7210, 7230, 7250, 7270, 7280, 7290, 7510, 7520, 8100 (Pearl), 8700c, 8700f, 8700g,</p> <p><b>Other devices using the mini USB connector</b></p> <p><b>iRiver™</b> T10 series, T30 series, PMP-100 series, PMC-100 series, H300 Series, iGP-100, iFP-1000 series, iFP-900 series, iFP-800 series, iFP-700 series, iFP-300 series, N10</p> <p><b>Garmin®</b> Forerunner 205, Forerunner 203, Forerunner 301, Edge 205, Edge 305</p> <p><b>Mio Technologies (Digi Walker®)</b> Various Mio satellite navigation units that charge via Mini-USB</p> <p><b>Camera's</b> Allows you to power many digital cameras that charge via their Mini-USB port</p>
	<p><b>For use with devices that can be charged via USB on your computer.</b></p> <p><b>iPod®</b> iPod®(10Gb, 20Gb, 30Gb, 60Gb) iPod® Video, iPod® nano, iPod® Shuffle</p> <p><b>Microsoft Zune®</b> Microsoft Zune 30Gb</p> <p><b>Sony Walkman®</b> 6Gb Sony Walkman, 8Gb Sony Walkman, 20Gb Sony Walkman</p> <p><b>Creative Zen™</b> ZEN V Plus, ZEN V, ZEN Micro, ZEN MicroPhoto, ZEN Neeon, MuVo Slim</p>
	<p><b>Dedicated Nintendo DS® lite handheld Connector</b></p> <p>Nintendo DS lite handheld games system</p>